





Montaje sin tornillos  
Montage sans vis ni écrous  
Aufbau ohne Schrauben

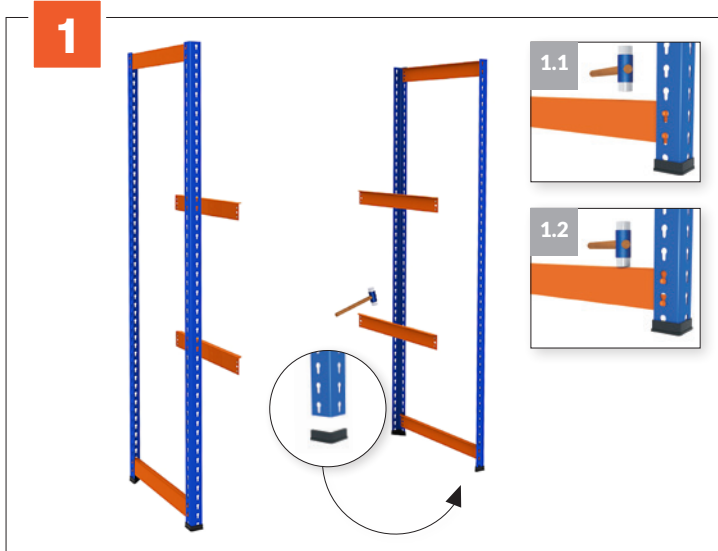

Se recomienda usar martillo de goma  
Recommandé utiliser un marteau en caoutchouc  
Empfohlen wird ein Gummihammer



Número de travesaños centrales de refuerzo según medida.  
Nombre de barras de refort centrales selon la dimension.  
Anzahl der zentralen Verstärkungsträger je nach Breiten- und Tiefenmaß.

ANCHO LONGUEUR BREITE	FONDO - PROFONDEUR - TIEFE			
	468 mm	620 mm	772 mm	925 mm
1231 mm	-	-	1	1
1536 mm	-	-	1	1
1841 mm	1	1	1	2
2146 mm	1	1	2	2

